


TOOLS NEEDED

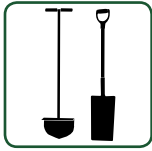

Edging
Shovels



Hammer or
Rubber Mallet



TRENCH

- 1 Identify the placement of your edging and begin to trench your path. Use a half moon shovel or garden spade shovel for trenching. Create an approximately 3-inch deep by 2-inch wide trench by moving your shovel side to side and front and back.



PLACE

- 2 Place edging into the trench. Edging should be approximately 1-inch above ground to properly separate your garden bed from your lawn.
- 3 Walk along edging and level to an even height with a rubber mallet or hammer.



- 4 Start at one end of the edging and use a hammer to secure hairpin stakes into the ground.



- 5 When connecting two edging pieces, overlap the two pieces by 2-inches before securing with the hairpin

- 6 Secure the overlapped edging pieces by hammering in a hairpin stake at the center of the overlap.



FILL

- 7 Backfill dirt along the back of your edging.

